

LELO

INA, MONA & LOKI WAVE™

USER MANUAL & WARRANTY INFORMATION

BEDIENUNGSANLEITUNG & GARANTIEHINWEISE

MANUEL D'UTILISATION & INFORMATION SUR LA GARANTIE

MANUAL DE USUARIO E INFORMACIÓN SOBRE LA GARANTÍA

MANUALE UTENTE E INFORMAZIONI SULLA GARANZIA

MANUAL DO USUÁRIO & INFORMAÇÕES DE GARANTIA

THANK YOU FOR CHOOSING LELO

LELO.com and its **Customer Care** section is the perfect place to get more information about using our products. You can also visit **VOLONTE**, the **LELO Blog** and follow us on **Social Media** for the latest tips and tricks on enjoying your purchase.

REMEMBER TO REGISTER WARRANTY

To register your warranty, find your warranty number on the LELO Authenticity card provided. Then visit **LELO.com** and click on **REGISTER** in the top right side of the page. This allows you to confirm the authenticity of your purchase and protect your investment.

CONTENTS

WARRANTY TERMS & CONDITIONS	01
GETTING STARTED	03
CHARGING	04
INA WAVE™	05
MONA WAVE™	07
LOKI WAVE™	09
USING YOUR INA, MONA AND LOKI WAVE™	11
STIMULATION MODES	11
CLEANING, STORAGE AND SAFETY	12
TROUBLESHOOTING	13
SPECIFICATIONS	14
DISPOSAL INFORMATION	15

WARRANTY TERMS & CONDITIONS

1-YEAR WARRANTY

LELO warrants this pleasure object for a period of ONE (1) YEAR, after the date of original purchase, against defects due to faulty workmanship or materials. If you discover a defect and notify LELO during the warranty period, LELO will, at its discretion, replace the pleasure object free of charge.

The warranty covers working parts that affect the function of the pleasure object. It does NOT cover cosmetic deterioration caused by fair wear and tear or damage caused by accident, misuse or neglect. Any attempt to open or take apart the pleasure object (or its accessories) will void the warranty.

Claims under warranty must be supported by reasonable evidence that the date of the claim is within the warranty period. To validate your warranty, please keep your original purchase receipt together with these warranty conditions for the duration of the warranty period.

To claim your warranty, fill in your details under CUSTOMER CARE on **LELO.com**. You will be sent a Return Merchandise Authorization (RMA) number which should be returned with the LELO product to your nearest LELO office carriage paid. Shipping costs are non-refundable. This undertaking is in addition to consumer's statutory rights and does not affect those rights in any way.

10-YEAR QUALITY GUARANTEE

As a continuation of the terms of LELO's full one (1) year warranty, LELO's ten (10) year quality guarantee makes owners eligible to purchase a new Pleasure Object from **LELO.com** for 50% off the listed price.

See the CUSTOMER CARE section of **LELO.com** for Terms & Conditions.

GETTING STARTED

To get the most out of your new LELO product, please read the instructions below. More detailed information is available online at LELO.com.

Given the nature of intimate massagers, we recommend you always use a premium water-based lubricant for added comfort.

- Before first use, charge massager for 2 hours (p.4).
- Turn on the massager by pressing the button on the middle of the interface until the light turns on (p.9).
- Press the + and – buttons to increase or decrease the vibration intensity.
- Press the ▲ and ▼ arrows to explore the 10 modes available.
- Press the middle button to turn off. Your LELO will remember your last chosen mode for the next time you turn it on.


NOTE: Press and hold the + and – buttons for 3 seconds to unlock or lock your LELO product. The lock setting will prevent accidental activation of the device. Charging will automatically unlock your LELO product.


CHARGING

Before charging, make sure the DC socket is free from water or lubricant residue.

- Gently insert the DC plug into the DC socket, deep enough to feel a subtle click.
- Insert the main plug into a wall socket. The LED will pulse to indicate that your LELO is charging. When fully charged (after c. 2 hours) the LED will emit a steady glow.
- The LED indicator glows red when your LELO product needs to be recharged.

Only use original chargers provided by LELO.

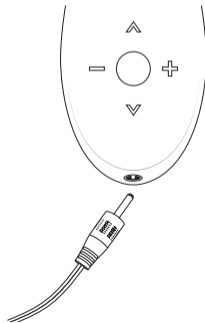


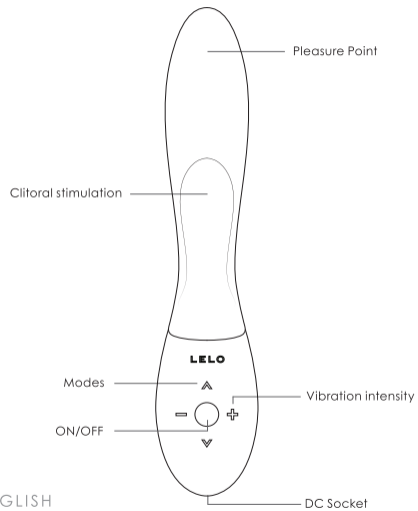

INA WAVE™

OVERVIEW


INA Wave is a sleek and stylish dual-action vibrator that incorporates a seductive waving motion to reach a woman's most erogenous zones, while ergonomically designed to suit the female body's natural curves.

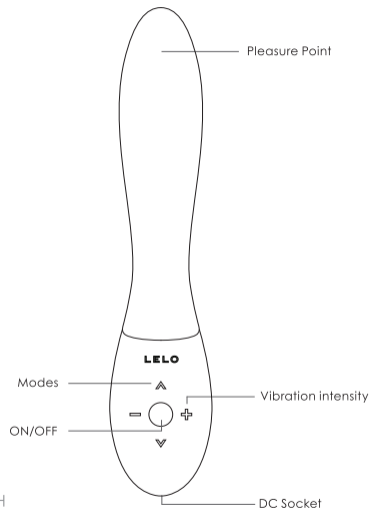

MONA WAVE™

OVERVIEW

MONA Wave is an elegant mid-size vibrator whose bodice moves in a seductive waving motion and curves in all the right places. It is ergonomically designed and facilitates pleasure alongside elegance, with a smooth silicone touch and easy-to-use interface.

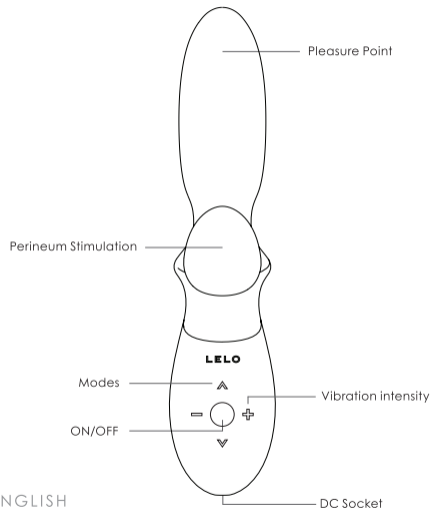

LOKI WAVE™

OVERVIEW

LOKI Wave is an expertly sculpted dual-motored massager perfectly designed to stimulate the perineum and prostate with a 'come hither' motion. Offering deeper, more satisfying sensations and more powerful orgasms, it is the pinnacle of male pleasure.

USING YOUR INA, MONA AND LOKI WAVE™

On/Off, vibration intensity, waving motions and stimulation modes are all controlled with the interface. When any of the buttons are pressed, the LED will indicate that the interface is active.

1. Push the On/Off button in the middle of the interface to activate or to turn off your LELO product.
2. Press the + button to increase vibration intensity.
3. At any time, press the – button to decrease vibration intensity.
4. Push the ▲ button to cycle through the various stimulation modes. There are 10 in total.
5. Push the ▼ button to return to a previous mode.
6. Your LELO automatically remembers and saves the last stimulation setting you were last using, so that the next time you turn it on, it will start at your preferred mode.

STIMULATION MODES

The INA, MONA and LOKI Wave have been programmed with stimulation varieties that take full advantage of the waving movements and massaging vibrations for intimate pleasure.

When you first turn the INA, MONA or LOKI Wave on, it will be in wave mode with a continuous vibration. Press the ▲ and ▼ button to move through the different modes and enjoy all the sensations!

CLEANING, STORAGE AND SAFETY

Your LELO product's lifespan will be greatly increased with proper maintenance and care. LELO recommends that you use a water-based lubricant such as LELO's Personal Moisturizer. Avoid using a silicone-based lubricant as this could make the silicone permanently tacky. If you wish to use a silicone-based lubricant, perform a patch test first.

Never use massage oil or hand cream as lubricants with your LELO. Always clean your LELO thoroughly before and after each use. The most effective way of doing this is to use a purpose-made cleaning solution such as LELO's Antibacterial Cleaning Spray. Alternatively, you can wash the silicone with warm water and antibacterial soap, rinse with clean hot water and pat dry with a lint-free cloth or towel. Never use cleansers containing alcohol, petrol or acetone.

Your LELO is 100% waterproof and submersible to a depth of 1 meter. The open charging socket is sealed from the internal workings of the massager, so can be cleaned and used underwater freely.

Avoid leaving your LELO in direct sunlight and NEVER expose it to extreme heat.

Store your LELO in a dust-free place and keep it away from toys of other materials.

IMPORTANT: For Adult Use Only. Those who may be pregnant, have a pacemaker, diabetes, phlebitis or thrombosis should consult with a medical professional regarding the risk of blood clots before using any personal massage product.

TROUBLESHOOTING

Your massager's light does not pulse when charger is connected?

- Battery is fully charged.
- Battery is drained and will require several minutes to acknowledge that it is being charged.
- Charger is not properly connected. Check wall and DC sockets.

Your massager does not turn on when the middle button is pressed?

- The interface is locked. Press and hold the + and - buttons for 3 seconds to unlock.
- Battery is empty. Proceed to recharge your massager.

If you experience any other problems with your LELO or if you have any questions regarding operation, please contact: CUSTOMERCARE@LELO.COM

SPECIFICATIONS

MATERIALS:	Body-safe silicone/ABS
BATTERY:	INA Wave/LOKI Wave: 850mAh 3.7V MONA Wave: 500mAh 3.7V
CHARGING:	2h at 5.0V
USER TIME:	2 Hour
STANDBY TIME:	90 days
FREQUENCY:	100 Hz
MAX. SOUND LEVEL:	<50dB
INTERFACE:	5-button interface

DISPOSAL INFORMATION

Disposal of old electronic equipment (applicable in the EU and other European countries with separate waste collection systems).

The crossed-out dustbin symbol indicates that this product should not be treated as household waste, but rather be brought to the appropriate collection point for recycling of electrical and electronic equipment.



Disclaimer: Users of this LELO Product do so at their own risk. Neither LELO nor its retailers assume any responsibility or liability for the use of this product. Further, LELO reserves the right to revise this publication and to make changes from time to time in the contents hereof without obligation to notify any person of such revision or changes.

Applicable for ALL products. Model may be changed for improvements without notice.

© 2015/2016 LELOI AB. ALL RIGHTS RESERVED.

LELOI AB, BIRGER JARLSGATAN 22, 114 34 STOCKHOLM, SWEDEN.

LELO Inc., 4320 STEVENS CREEK BLVD., SUITE #205, SAN JOSE, CA 95129, USA.

DESIGNED AND DEVELOPED BY LELO SWEDEN

MANUFACTURED BY LELO IN CHINA

WEBSITE WWW.LELO.COM

SUPPORT CUSTOMERCARE@LELO.COM

www.lelo.com